



EasyCrashStop


Installation Instructions

1. Positioning and Substrate Preparation




Determine the height of the bottom edge of the strip above the floor and mark it, e.g., using a line laser.

Attach adhesive tape along the defined bottom edge on the wall. Choose the tape type according to the substrate, e.g., fabric tape or masking tape (ensure residue-free removal).

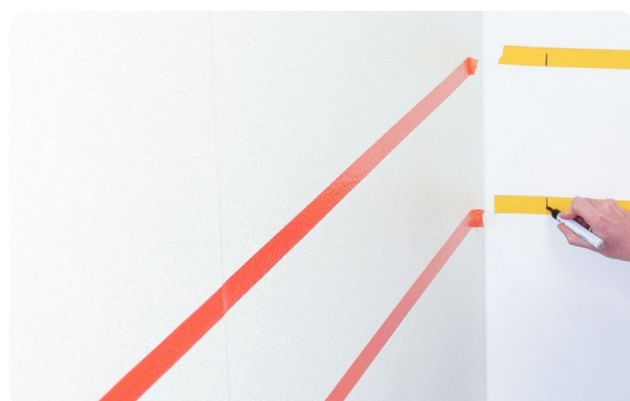

In the same way, attach adhesive strips along the top edge and mark the side edges.

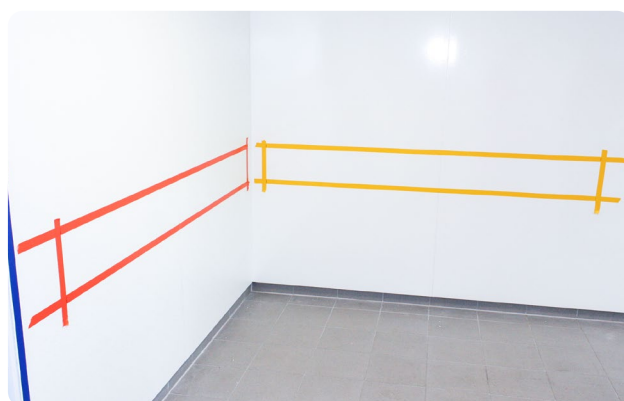

Completely frame the area of the side strip to be installed with adhesive strips.



For textured GRP with PET coating: pre-treat the wall substrate with primer to improve adhesion of the edge bonding.

LOCHEN >



EasyCrashStop Installation Instructions

2. Installation



Have tools ready; place the impact protection strip face down on the work table.



Apply double-sided adhesive tape section by section to the center of the back of the strip.

Our 1C adhesive **Ad-Maxx 2.0** is used.

For smooth GRP with gelcoat, the 2C joint compound **KL 25 Hard Joint** can alternatively be used.



Apply adhesive continuously around the edges of the strip without interruption.

A continuous bead of adhesive is crucial for the later tightness of the bond.



Align the strip along the markings and press firmly against the wall.

Observe the adhesive manufacturer's processing instructions! Protective gloves and additional protective measures may be required.



LOCHEN >



EasyCrashStop Installation Instructions

3. Finishing



The joint/adhesive compound may slightly seep out at the edges.



Smooth the strip edges with a spatula.



Then immediately remove the adhesive tapes. If necessary, secure the strip from the outside with adhesive tape strips until the adhesive is fully cured.



The finished edge of the mounted strip on smooth and textured substrates should sit flush against the wall and strip.

LOCHEN >